


【Service】

A hollow fiber membrane is installed in the Concentration Tank, and suction filtration is performed by the Filtrated Water Pump.


The filtered water is discharged outboard.

The scrubber wastewater is concentrated to 1/20th its original volume in the Concentration Tank and discharged to the Removed Residue Tank.

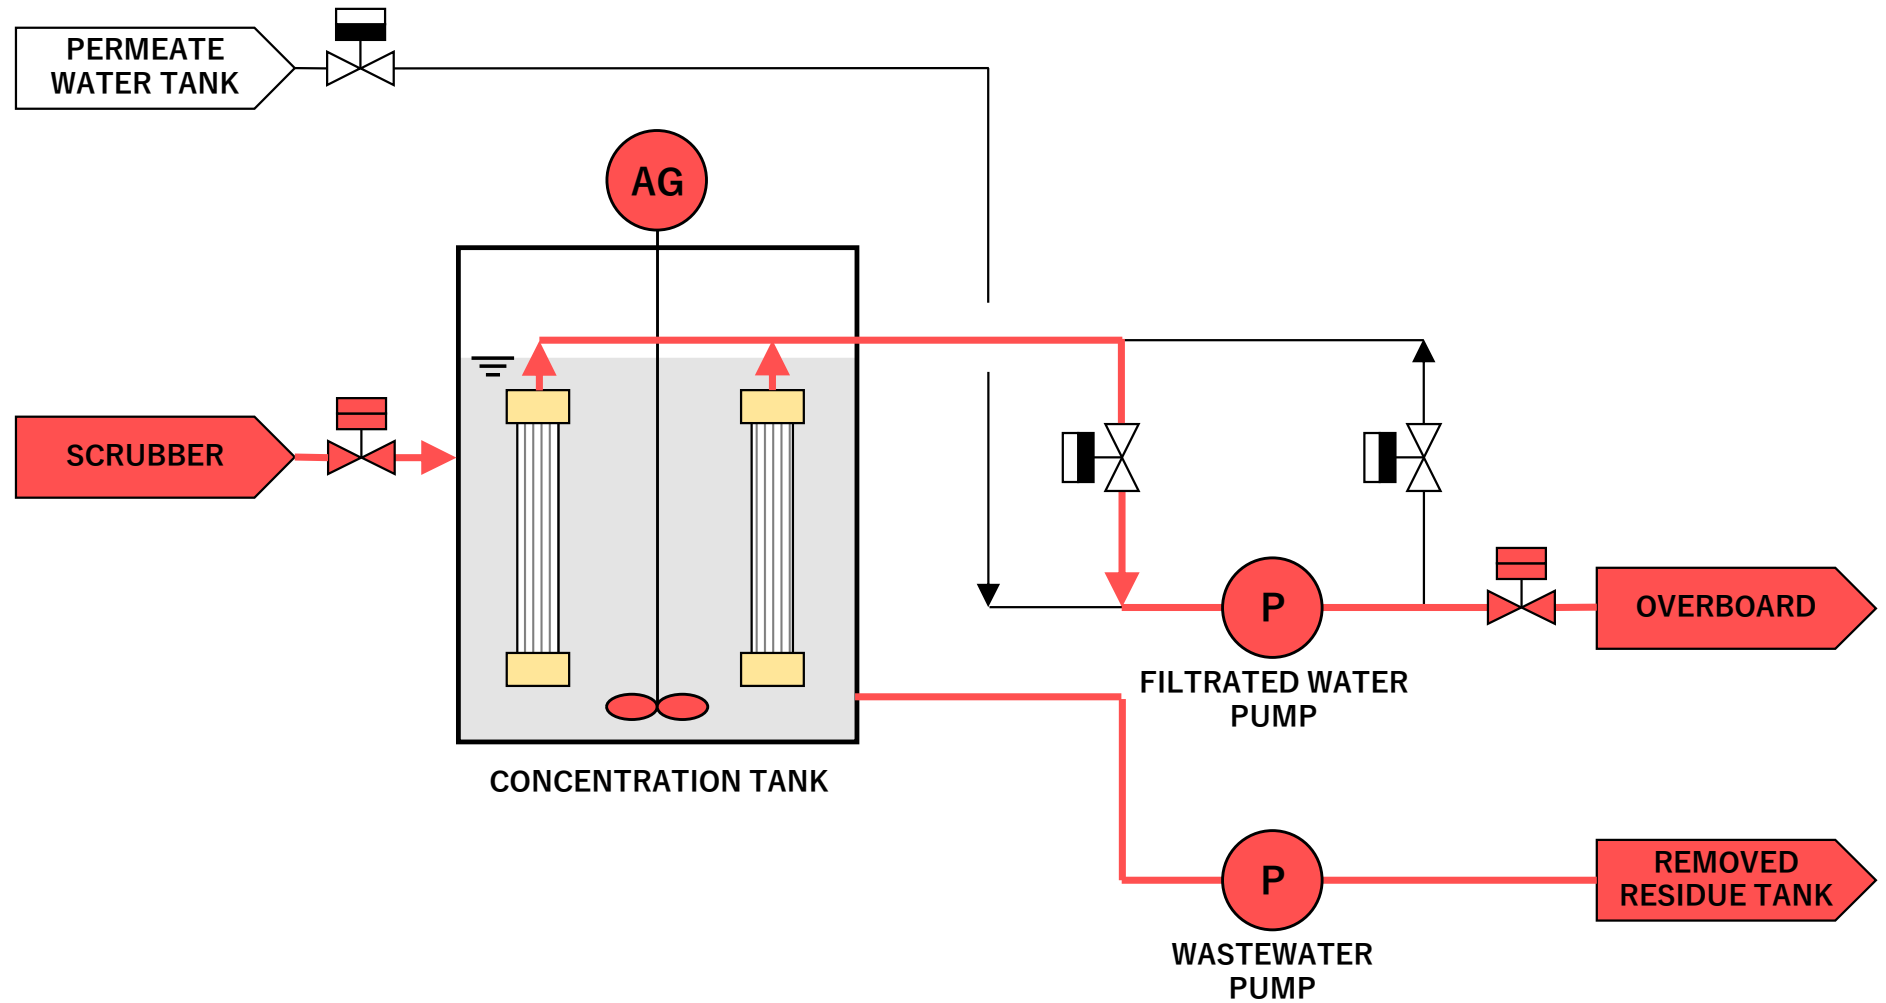

【Backwashing】

Backwashing of the membrane is performed regularly and automatically.

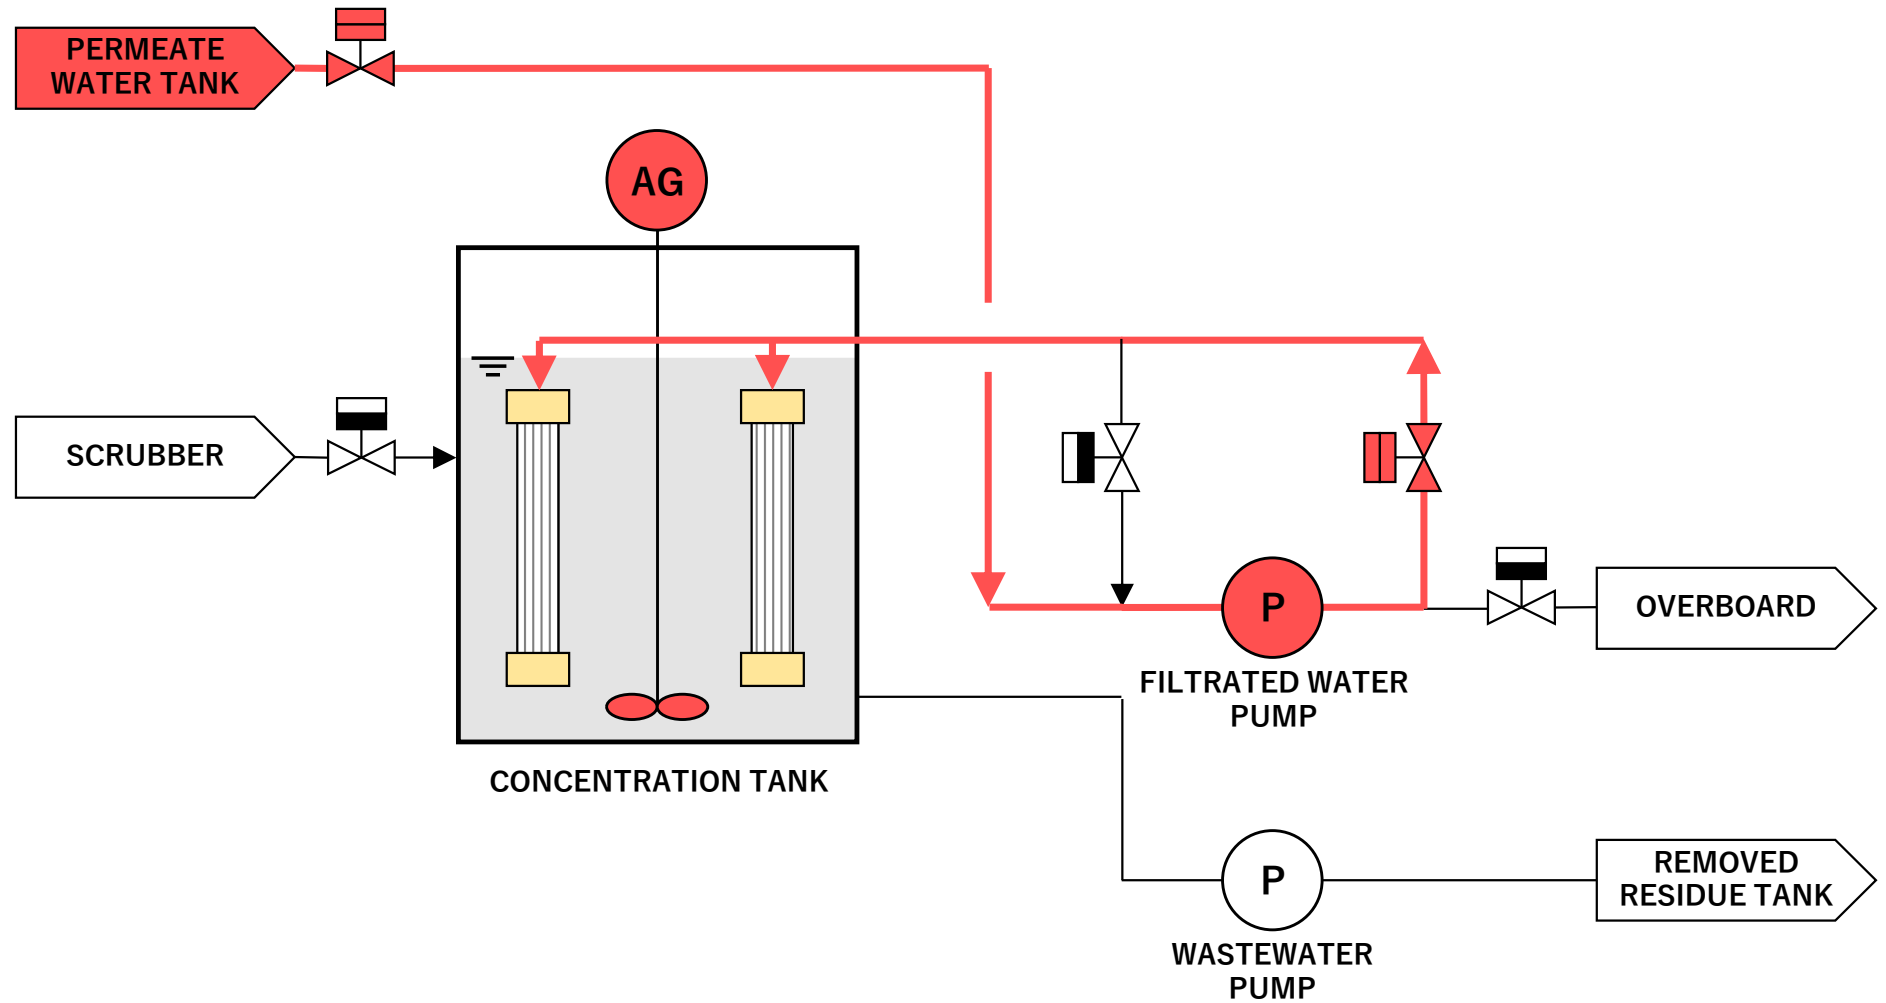

【Chemical Cleaning】

If the differential pressure does not recover after backwashing, chemical cleaning is performed to recover the water permeability of the membrane.

